

## **Object Locator LIV-051-349-0000**

---

### **Contents of Box**

- 1) Transmitter with keyring attached x1
- 2) Receiver x3 (green, blue, red)
- 3) Key ring x2
- 4) Lanyard x2
- 5) Double-sided adhesive sticker x3

### **Instructions**

- 1) By using the key ring (included) or double-sided adhesive sticker (included) attach one of the receivers to an object that is easily misplaced.
- 2) Turn the receiver on. Two circular holes are on the front side of the receiver. Flip the receiver over to the back and orient it so that the slider switch is nearest you. Slide the switch to the right to turn the receiver on. When not in use and to conserve battery power, slide the switch to the left to turn off.
- 3) Press the colour-coded pager buttons on the transmitter to trigger the 'beep' sound of the corresponding receiver. This will help locate the object marked in step 1.

\*Note: if you are in a noisy area, press the buttons on the transmitter repeatedly for better echoing with corresponding fobs.

### **Working Range**

Periphery within 7 to 10 meter radius.

### **Changing the Batteries**

- 1) Use a Phillips screwdriver to remove the screws on the back cover. Remove the cover.
- 2) Remove the old battery and install a new one (CR2016 lithium) with the "+" polarity facing up
- 3) Replace the back cover and fasten the screws.