

MEN'S TALKING WATCH SILVER FINISH EXPANSION BAND 1 BUTTON

TIM-141-511-3110

Getting to know your new watch:

Your watch is actually **two watches in one**, a talking watch and a conventional quartz watch with black hands on a white face. Because the two watches are not linked internally they must each **be set separately**.

Around the case of the watch are **four controls**: a setting wheel or crown at the familiar 3 o'clock position for setting the hands; and a raised button and two recessed buttons for setting the talking watch.

The talking watch controls are a **raised button at the 2 o'clock** position that produces a **report of the time** when it is pushed; and 2 recessed buttons at the **4 o'clock** and **8 o'clock** positions that are used for **setting the time**.

The watch uses 2 batteries, one for the talking watch and another for the conventional quartz watch; both should be replaced periodically.

Setting the current time:

1. Setting the watch's hands:

Have the watch face towards you and the crown wheel on the right at the 3 o'clock position. Your watch may have been shipped with a **small plastic lock** between the crown and the case that prevents the watch battery from running down while the watch is in storage. If so, then you will need to **remove it** by pulling gently. If it does not come free easily, pull out the crown as far as it will go, which is 1mm or so, and then remove the lock; push the crown back into the case.

With the crown pulled out from the case, **turn the crown wheel to move the hands** into the required time setting. Push the crown back into the case when this is done; the second hand will now start to move.

2. Setting the time of the talking watch:

The controls for setting the watch are the 2 **recessed buttons** around the perimeter of the case at the **4 o'clock** and **8 o'clock** positions. For simplicity these instructions will refer to them by their locations, as **button 4** and **button 8**.

You will need to use the **tip of a pen**, or something similar, to press the buttons. Each button has a small dimple in the centre to prevent the pen tip from slipping.

Press **button 4** and the clock will speak the current **hours' value**; it adds the abbreviation AM or PM, as appropriate. Press button 4 repeatedly until the correct hour is spoken.

Press **button 8** in the same way until the **minutes** are correct.

Press the raised talking button at 2 o'clock to hear an updated time report, just as a final check.

3. Time announcement report:

Press the **raised button at the 2 o'clock** position at any time to hear a time report. The report is preceded with the phrase, "The time is" and it includes a report of whether the time is AM or PM.

Note: this watch operates **only in the 12-hour mode** with AM and PM reports and cannot express the 24-hour clock. Time reports do not include the seconds.

Battery replacement:

The watch's sound volume will decrease and the hands will stop moving if the batteries need to be replaced. This watch uses **2 batteries**, type **SR626** for the **quartz watch** with hands and type **CR2016** for the **talking watch**; both should be replaced at the same time.

Due to the complexity of the watch's construction, CNIB strongly advises you to take the watch to a watch repair specialist for battery replacement, and **not to attempt it yourself**.

Any problems?

Your watch is warranted against manufacturing faults for **24 months from the date of its original sale**, subject to normal use and care; abuse voids this warranty – which does not cover the replacement of **batteries past the first 30 days**. CNIB reserves the right to repair a watch or to replace it with an identical model, or an equivalent model if the original model is no longer available.

Call 1-866-659-1843 for advice or to report a defective product.

If your watch has to be returned, send it to:

CNIB – Shop CNIB Repairs
1929 Bayview Avenue
Toronto, ON
M4G 3E8
Canada