

TALKING INDOOR/OUTDOOR THERMOMETER LIV-031-321-0003

FEATURES

1. Announce both indoor and outdoor temperature in a pleasant female voice.
2. Selectable Fahrenheit (°F) or Celsius (°C) scale.
3. Volume control and on/off.
4. Display indoor or outdoor temperature.
5. User can set indoor/outdoor high and low temperature.
6. Sounds an alarm if temperature goes above or below set range.

INSTALLING BATTERIES

Your thermometer is powered by two UM4 (AAA) batteries. We recommend alkaline batteries.

Follow these steps to install batteries:

1. Slide off the battery compartment door in the direction of the arrow located in the back of the thermometer.
2. Place two fresh UM4 (AAA) batteries in the compartment as indicated by the polarity symbols (+ and -) marked in the compartment.
3. Replace the battery compartment door.

If voice announcement sound is weak or the display dims, replace the batteries.

It is recommended that the batteries be removed from the thermometer if you do not use the unit for a long period of time.

MOUNTING THE THERMOMETER AND REMOTE SENSOR

Choosing a location:

The indoor temperature sensor is located inside the thermometer unit. The outdoor temperature sensor, which measures the outdoor temperature, is connected to the unit by a cable and should be placed outside the house. Pick a place near the window for the thermometer, ensuring that the outdoor sensor can be mounted outdoors.

Cautions:

- Do not place the thermometer or the outdoor sensor in direct sunlight. It will give erroneous readings.
- Keep the thermometer and the outdoor sensor away from stoves, heating and air conditioning vents, radiators and other sources of hot or cold air.

Mounting the Thermometer:

The thermometer is designed for both wall mounted and desktop use.

Follow these steps to mount the thermometer on the wall:

1. Drive a screw or nail into the wall, leaving about $\frac{1}{4}$ exposed.
2. Hang the thermometer using the keyhole slot on the back of the thermometer. Slide the thermometer down until it locks into place.

You can also place the thermometer on a level surface using its built-in stand. Slide out the stand all the way at the bottom back of the thermometer and pull the stand towards you until it locks into place.

Mounting the Remote Sensor:

1. Route the outdoor sensor's wire through a window opening.
2. You can leave the sensor hanging or fasten the sensor's plastic loop to a surface using the included screw.
 - Locate the sensor in a place where it has no direct sunlight, or it will give unrealistic higher temperatures.
 - Keep the sensor away from a hot surface.

OPERATION:

ADJUSTING THE VOLUME

Repeatedly press VOLUME on the back of the thermometer to select  for high volume,  for low volume, or no display for volume off.

SELECTING INDOOR OR OUTDOOR CURRENT TEMPERATURE DISPLAY

To display current indoor temperature, slide the IN-OUT switch on the front of the thermometer to IN, and IN appears on the display.

To display the current outdoor temperature, slide the IN-OUT on the front of the thermometer to OUT, and OUT appears on the display.

SELECTING (°C) AND (°F)

The announcement as well as the display can be in °C or °F. Slide the °C-°F switch on the back of the thermometer to °C or °F.

ANNOUNCING THE CURRENT TEMPERATURE

Press TALKING. The unit reports both the current indoor and outdoor temperatures.

SETTING THE TEMPERATURE ALARMS

You can set a temperature range for both indoors and outdoors. The unit will sound an alarm if the temperature goes above or below set range.

Follow these steps to set the range:

1. Repeatedly press MODE until you hear INDOOR HIGH TEMPERATURE ALARM SET XX CELSIUS/FARHRENHEIT and IN MAX appears on the display.
2. Repeatedly press (or hold down) UP or DOWN to set your indoor temperature upper limit.
3. Press MODE again. You will hear INDOOR LOW TEMPERATURE ALARM SET XX CELSIUS/FAHRENHEIT and IN MIN appears.
4. Repeatedly press (or hold down) UP or DOWN to set your indoor temperature lower limit.
5. Repeat step 3 and 4 to set outdoor temperature upper and lower limits.

USING THE ALARM

To turn on the alarm, repeatedly press ALARM ON/OFF until you hear "Alarm on" and  appears on the display.

When the temperature goes above or below the set range, the thermometer beeps, shows a flashing  and IN or OUT appears and announces the corresponding temperature alarm (s) for one minute then repeats the 1 minute announcement twice every 3 minutes.

After the thermometer announces three times, you will hear "DI DI" every one minute if the temperature goes above or below the set temperature limit.

To silence the alarm, press any button.

To turn off the alarms, press ALARM ON/OFF until you hear "Alarm off" and  disappears.

Even if you turn the thermometer volume to OFF, the alarm will still sound at low volume.